

## Montec Connect BLF – Yealink phones.



This manual is designed to guide customers through setting up the BLF (Busy Light Function) feature on compatible Yealink phones. The guide will presume you have already configured the VoIP registration settings. If you still need to register the phone to Montec Connect, please check the Setup Guides page or call Montec Connect on 1300 011 585.

1. Retrieve the IP Address of the phone you would like to configure the BLF on. This can be done by pressing the 'OK' button on the phone. Type the IP address into your web browser to enter the Web Configuration of the phone. The default username and password will be 'admin'.
2. Click on the 'DSSKey' tab at the top. For each BLF button you would like to configure, chose the 'BLF' Type, enter the **Full** Extension Number of the phone you want to see the status of, type the name of the Extension Number and then click 'Confirm'.

Log Out
Yealink | T46G

Status
Account
Network
DSSKey
Features
Settings
Directory
Security

Line Key 1-9

Line Key 10-18

Line Key 19-27

Programable Key

Ext Key

Enable Page Tips
Disabled
Label Length
Default

Key	Type	Value	Label	Line	Extension
Line Key1	Line	Default		Line 1	
Line Key2	Line	Default		Line 1	
Line Key3	Line	Default		Line 1	
Line Key4	Line	Default		Line 1	
Line Key5	Line	Default		Line 1	
Line Key6	BLF	Full Ext Number (111101)	Name of Ext	Line 1	
Line Key7	BLF	Full Ext Number (111102)	Name of Ext	Line 1	
Line Key8	BLF	Full Ext Number (111103)	Name of Ext	Line 1	
Line Key9	BLF	Full Ext Number (111104)	Name of Ext	Line 1	

Confirm
Cancel

NOTE

**Key Type**  
The free function key 'Types' Speed Dial, Key Event, Intercom.

**Key Event**  
Key events are predefined shortcuts to phone and call functions.

**Intercom**  
Enable the 'Intercom' mode and it is useful in an office environment as a quick access to connect to the operator or the secretary.

Copyright © 1998-2012 \*\*Inc. All Rights Reserved

Note: Make sure to include your PBX suffix in the extension number. The Extension Number should be 5-6 digits in length.

3. To allow your phone to pick up one of the ringing BLF lines, you will need to setup the Call Pickup feature.

Click on the 'Features' tab at the top, then click on 'Call Pickup' on the left hand side. Change the 'Directed Call Pickup' value to Enabled, type \*98 into the 'Directed Call Pickup Code' field and then click Confirm.

The screenshot displays the Yealink T46G web interface. At the top, the 'Features' tab is selected. The left sidebar shows 'Call Pickup' highlighted. The main content area is titled 'Call Pickup' and contains the following configuration table:

Feature	Value	Help
Directed Call Pickup	Enabled	?
Directed Call Pickup Code	*98	?
Group Call Pickup	Disabled	?
Group Call Pickup Code		?
Visual Alert for BLF Pickup	Disabled	?
Audio Alert for BLF Pickup	Disabled	?

Below the table are 'Confirm' and 'Cancel' buttons. A 'NOTE' box on the right contains the text: 'Call Pickup: The call pickup parameters for administrator.'

Copyright © 1998-2012 \*\*Inc. All Rights Reserved