

Yealink T48G Setup Guide

To configure the Yealink T48G to your Montec Connect account, first retrieve the IP Address so that you can log into the 'Web Configuration' via your computer. To do this, the 'OK' button in the middle of the D-Pad. The IP Address should show up in the Status Page. Enter The IP Address into your web browser.

Once you are on the Web Configuration page enter the username and password. By default the username will be 'admin' and the Password will be 'admin'.

Once you have successfully logged in, click on the 'Account' tab across the top. Here you will place your Extension information and the SIP Server (*sip.monconnect.com.au* for Residential and Sip Trunk accounts, and *pbx.monconnect.com.au* for Hosted PBX accounts) as the bellow screenshot shows:

The screenshot displays the 'Account' configuration page for 'Account 1'. The 'Advanced' tab is selected. The configuration includes the following fields and values:

Field	Value
Register Status	Registered
Line Active	Enabled
Label	Optional
Display Name	Optional
Register Name	Extension Number
User Name	Extension Number
Password	Extension Password
Enable Outbound Proxy Server	Enabled
Outbound Proxy Server	pbx.monconnect.com.au
Port	5060
Transport	UDP
NAT	Disabled
STUN Server	
Port	3478
SIP Server 1	
Server Host	pbx.monconnect.com.au
Port	5060
Server Expires	120
Server Retry Counts	3
SIP Server 2	
Server Host	
Port	5060
Server Expires	3600
Server Retry Counts	3

Buttons: Confirm, Cancel

Copyright © 1998-2012 **Inc. All Rights Reserved

Hit the 'Confirm' Button at the bottom of the page to save the details. Once the page has reloaded, click on advanced and type '50002' into the 'Voicemail' field. This is the voicemail number. Again hit 'Confirm' to save the settings.

Next, click on the 'DSSKey' tab at the top. In here you will configure the multiple lines for the once extension, allowing you to make and receive multiple calls through your extension number.

Key	Type	Value	Label	Line	Extension
Line Key1	Line	Default		Line 1	
Line Key2	Line	Default		Line 1	
Line Key3	Line	Default		Line 1	
Line Key4	Line	Default		Line 1	
Line Key5	Line	Default		Line 1	
Line Key6	Speed Dial			Line 1	
Line Key7	Speed Dial			Line 1	
Line Key8	Speed Dial			Line 1	
Line Key9	Speed Dial			Line 1	

Feel free to also setup some Speed Dials for important numbers. If you would like to setup BLF (Busy Lamp Field) to see the status of the other extensions please refer to the *BLF Guide* for this phone model on the Montec Connect website.

Now that the lines have been configured, you will now want to set the time zone and time format, which can be done under the top 'Settings' tab, and then the 'Time and Date' button on the left.

At this point, the phone should be ready to go. If you have any troubles making and receiving calls from here on in, please give Montec Connect a call on **1300 011 585**.