

## Yealink W52P Setup Guide

To configure the Yealink W52P to your Montec Connect account, first retrieve the IP Address so that you can log into the 'Web Configuration' via your computer. To do this, press the page button on the base station. The IP Address should show up on the handset screen. Enter The IP Address into your web browser.

Once you are on the Web Configuration page enter the username and password. By default the username will be 'admin' and the Password will be 'admin'.

Once you have successfully logged in, click on the 'Account' tab across the top. Here you will place your Extension information and the SIP Server (*sip.monconnect.com.au* for Residential and Sip Trunk accounts, and *pbx.monconnect.com.au* for Hosted PBX accounts) as the bellow screenshot shows:

The screenshot displays the 'Account' configuration page for a Yealink W52P device. The 'SIP Server' field is highlighted with a green box and contains the value 'pbx.monconnect.com.au'. Other fields like 'Register Status', 'Account Active', 'Label', 'Display Name', 'Register Name', 'User Name', 'Password', 'SIP Server', 'Enable Outbound Proxy Server', 'Outbound Proxy Server', 'Transport', 'Backup Outbound Proxy Server', 'NAT Traversal', 'STUN Server', 'Proxy Require', 'Anonymous Call', and 'Anonymous Call Rejection' are also visible. A 'NOTE' section on the right provides additional information for several fields.

Field	Value	Port
Register Status	Disabled	
Account Active	Enabled	
Label	Optional	
Display Name	Optional	
Register Name	Extension Number	
User Name	Extension Number	
Password	Extension Password	
SIP Server	pbx.monconnect.com.au	5060
Enable Outbound Proxy Server	Disabled	
Outbound Proxy Server		5060
Transport	UDP	
Backup Outbound Proxy Server		5060
NAT Traversal	Disabled	
STUN Server		3478
Proxy Require		
Anonymous Call	Disabled	
Anonymous Call Rejection	Disabled	

**NOTE**

- Display Name**  
SIP service subscriber's name which will be used for Caller ID display.
- Register Name**  
SIP service subscriber's ID used for authentication.
- User Name**  
User account, provided by VoIP service provider.
- NAT Traversal**  
Defines the STUN server will be active or not.
- Proxy Require**  
A special parameter just for Nortel server. If you login to Nortel server, the value should be: com.nortelnetworks.firewall

Copyright © 1998-2011 \*\*Inc. All Rights Reserved

Hit the 'Confirm' Button at the bottom of the page to save the details. Once the page has reloaded, click on advanced and type '120' into the 'Login Expires' field. This is how often the phone registers itself with the system. Again hit 'Confirm' to save the settings.

If you are only using one handset with this base station, then the setup should be complete.

If you are using multiply handsets on the one base station, you can either have all handsets use the one Extension, or configure individual Extensions for each phone, and assign them accordingly in the 'Number Assignment' page. If you required more information on this part, please don't hesitate to contact Montec Connect.

Now that the extension is registered you will now want to set the time zone and time format, which can be done under the top 'Phone' tab, and then the 'Preferences' button on the left.

At this point, the phone should be ready to go. If you have any troubles making and receiving calls from here on in, please give Montec Connect a call on **1300 011 585**.